

Swissphone RE729

Quick start guide



Profiles / Replay messages

Click once = current profile
Double-click = switch profile
Hold button = replay message



Volume

Click once = current volume
Hold button = increase volume
Double-click = decrease volume



How do I turn on the pager?

Press both buttons at the same time.

How do I know on which profile I am on?

Click the left button once to hear the voice announcement or look at the display.

How do I switch profiles?

Double-click the left button to get to the next profile.

How do I turn up volume?

Hold down the right button until you reach the desired volume.

How do I turn down the volume?

Double-click the left button until you reach the desired volume. The lowest volume setting is «vibrate».

How do I replay messages?

Hold down the left button for two seconds.

Note: A voice prompt will start just like when you hit the left button once. Ignore it and keep holding down the button.

How do I skip to the next message?

Press the left button while the message is playing.